

**Eagle Air Compressor part breakdown sheet - IHP104L**

August 1, 2007

Item	Description	Part	QTY
1	Filter	1068	1
2	Filter element	1068A	1
3	Head bolt	1001	4
4	Spring washer	1002	4
5	Cylinder head	1003	1
6	Exhasut elbow	1004A	1
7	Head gasket	1005	1
8	Valve plate	1006	2
9	Reed valve	1006A	2
10	Valve plate gasket	1006B	1
11	Upper cyl. gasket	1007	1
12	Cylinder	1008B	1
13	Bolt	1015	2
13a	Spring washer	1016	2
14	Lower cyl. Gasket	1014	1
15	Compression ring	1010M	2
16	Scraper ring	1010N	1
17	Piston	1009B	1
18	Piston pin	1012B	1
19	Snap ring	1011B	2
20	Connecting rod	1013B	1
21	Bolt	1021	1
22	Crankshaft	1017A	1
22a	Bolt M8x22MM-LH	1018	1
23	Oil fill plug	1025	1

Item	Description	Part	QTY
24	O Ring	1022A	1
25	Crankcase cover	1020	1
26	Bolt	1024	4
27	Oil sight glass gasket	1022	1
28	Oil sight glass	1023	1
29	Crankcase cover gasket	1019	1
30	Nut	1500	1
31	Running capacitor	1038	1
32	Overload protector	1067	1
33	Bolt	1035	4
34	Spring washer	1034	4
35	Crankcase run start	1026	1
36	Oil seal	1027	1
37	Spring washer wave	1032	1
38	Bearing	1028	1
39	Retaining ring	1037	1
40	Rotor	1900	1
41	Bearing	1030	1
42	Stator	1900A	1
43	Rear motor cover	1033	1
44	Fan	1036	1
45	Shroud	1042A	1
46	Tank	1225	1
47	Handle	1650A	2

Item	Description	Part	QTY
48	Drain valve	1061	1
49	Safety valve	1051A	1
50	Pressure switch	1044B	1
51	Pressure gauge	1047T	1
52	Pressure gauge	1047T	1
53	Plug	1360	1
54	Regulator	1049	1
55	Quick connect	1050T	1
56	Nipple	1048	1
57	Connector	1045	1
58	Nut	1045A	1
59	Gasket	1045B	1
60	Check valve	1062B	1
61	Strain relief	1052	1
62	Exhaust pipe	1175	1
63	Nut	1500	3
64	Flat washer	1059	6
65	Cushion foot	1058	3
66	Bolt	1501	3
67	Power cord	1053	1
68	Terminal (Y)	1055	2
69	Terminal (O)	1054	1
70	Unloading tube	1315	1
71	Nut	1066	1



IHP104L

